

User Manual

ability to control by voice commands with
Amazon Alexa and Google Home



 **tempSensor DIN** WIRELESS TEMPERATURE SENSOR 230V, DIN RAIL MOUNTING

SAFETY RULES



Connect only in accordance with the diagram presented in the manual. Improper connections may be dangerous, it can damage the controller, and loss of the warranty.



DANGER! Risk of electric shock! Even with the device turned off, the outputs may be live. All assembly work should be **ALWAYS** performed with the disconnected power circuit.



The installation of the device to a power mains that does not meet the quality requirements defined by PN-EN 50160, will result in the loss of the warranty.



Protect the power circuit with overcurrent protection.

1 INSTALLATION - BASICS

The connection diagrams can be found at the end of the manual

- Disconnect the installation supply voltage before installing the controller. Remember that any mounting works should be carried out when the mains voltage is disconnected (switch off the mains fuse or disconnect the power cord from the mains socket).
- The controller should be installed on the DIN rail, protected from third party access - in the flush box or inside the enclosure of the controlled device. Remember that metallic elements (wires, housing parts) have a negative influence on the range of the device, and consequently the comfort of use. It is recommended that the device be mounted in a stable and fixed position. Due to the operating voltage of the device it is necessary that the connectors of the controller be protected against accidental contacts or short circuits, which could cause electric shock or damage to the device.
- Read the diagram and then proceed to install the controller. Pay particular attention to the designation of the controller connectors. Start with power wires - phase L (usually brown) and neutral N (blue).
- Next, connect the external temperature sensor, in the following wire color order (from left): red, black and yellow, or brown, white and green.
- Sensors can be connected in parallel or according to the available wiring diagrams. Wires specified in the documentation should be used for the installation. If there are any unused conductors in the cable must be grounded.
- The measurement probe is waterproof. It is not allowed to install the probe in a place exposed to contact with oils, liquid fuels, solvents and caustic substances.



Probes are sold separately. A selection of "BleBox tempProbe" probes in various lengths is available for purchase separately.

- After making sure that the device is connected in accordance with the diagram and that there are no metal components near the controller which may accidentally cause short-circuit, start the device by turning on the power (turning on the mains fuse or connecting the power cord to the power outlet).
- When starting the device, a flashing yellow LED may appear, indicating the initialization process or probe detection. The duration of this process depends on the number of probes and the length of the cables connected to them. A flashing red LED indicates a probe error or a problem with probe detection. A corresponding message is also displayed in the wBox software

(more information about the wBox application can be found later in this manual). In such a case, check whether the probes are connected according to the wiring diagram and specification, and verify that neither the probe nor the connecting cable is damaged.

- Devices mounted on a DIN rail can generate significant amounts of heat. It is recommended to install with a distance of at least 1 cm between BleBox DIN modules to ensure adequate air flow. In the case of using many DIN modules, it is recommended to force the air circulation in the switchboard mechanically.

2

FIRST START

- Download the **free wBox application**. If you have an Android mobile device, you will find the application in the Play Store. For iOS devices the application is in the App Store.
- By using your mobile phone or tablet, connect it to the device wireless network. To do this, go to your smartphone or tablet settings, then go to setting of the WiFi network and find the network name "tempSensor_DIN-xxxxxxx" where xxxxxxxx is the serial number of the device. Connect to this network.
- Turn on the wBox application. You will see your device on the main screen. In order to add it to your application account, select "Add device to account". If you are the installer and do not want to assign the device to your account, select "Use only once".

3

WIFI CONNECTION AND SERVICE CONNECTION (AP) SETTINGS

- Go to the WiFi network settings ("Settings" icon in the top right corner of the screen, "Connection" section), where you can connect the device to the home WiFi network to be able to control the device via it or from anywhere in the world. To do this, select the network name from the list of available networks and press "Connect". If required, enter your WiFi password. When connecting the device to the home network, the phone / tablet may disconnect from the device's network.
- You can also configure the network settings using a web browser. After connecting to the controller's wireless network, turn on the browser and go to www.blebox.eu
- After reconnecting the phone to the controller's WiFi network, check the "WiFi Client status" and "Remote access status" fields. The controller is equipped with a network connection supervision system which in case of problems with connection to the WiFi or the Internet will report the problem and its possible causes. If the network is working properly both fields will be set to "Connected".
- In order to communicate with the device from outside the local WiFi network, from anywhere in the world, via the wBox application, the device automatically connects to the BleBox cloud system service by default. The remote access system is fully encrypted and secure, the data are transmitted by European servers from reputable companies. It is possible to disable the remote access service - after clicking the "Configure" button, toggle the switch next to the "Remote access" option. Disabling the "Remote access" option will disable the controller from being used outside the local network. It will also disable access to historical data (including charts), push notifications on smartphones and integrations with external systems (e.g. Google Home, Amazon Alexa). We recommend keeping this function enabled (this is the default setting).
- Enabling the "Event log" option will cause the device to record events (e.g. about sent notifications set in the "Actions" section) in the BleBox cloud system. This allows the history of the events to be viewed later also when the controller is offline.

- After completing the WiFi network configuration, you can disconnect from the device network and connect the phone / tablet directly to your home WiFi network. Control from the wBox application will work in the same way as when the phone / tablet is connected to the device's network. If as a user you leave the local network, eg leaving your home or enclosing mobile data, the wBox application will signal this status as "Remote mode". In this case, you will have access to the device data, but for security reasons settings options will not be available.
- In the "Service connection (AP)" section, you can change the name and give the password of the WiFi network emitted by the device. Remember that changing the network name or password can cause disconnection with the device immediately after clicking the "Save" button, so you should reconnect to the WiFi network.
- It is also possible to completely disable the access point emitted by the device. To do this move the "Access point" slider to the off position and confirm the selection with the "Save" button.
- Attention! If the controller does not have a stable connection to the WiFi network ("WiFi client status": "Connected", without any error warnings), restarting the access point will not be possible - in this situation, the only solution is to reset the controller to the factory settings. Disabling the access point is recommended only after the complete driver configuration and making sure that the entire system is working properly.

4

DEVICE SETTINGS

- On the main control screen, where the temperature measured by the probes is displayed, go to the device settings (the "gear" icon in the upper right corner).
- In the "Name and Icon" section, you can change the device name under which it is displayed in the wBox application. Here you can also assign custom, user-friendly names to individual sensors, e.g. "Air Temperature" or "Pool Water Temperature."
- In this section, you can set a different icon for each sensor (e.g. water temperature, pool, hot tub, sauna, indoor temperature, outdoor temperature, smokehouse, etc.). This allows the user interface to be better adapted to the specific application.
- In the "Device Settings" section, in addition to the option to disable the LED indicator, you can configure the connected temperature probes. After the device is powered on for the first time, the probes are automatically detected and assigned to the appropriate tabs ("Sensor 1", "Sensor 2", etc.) based on their unique identifiers. Configuration is carried out separately for each probe. If the full number of sensors is not being used, you can disable the display of a selected sensor here by deactivating the "Sensor enabled" option. By default, the device will configure as many sensors as probes are connected.
- Under the "Probe" position displays a list of found probes with the current temperature values. To recognize the probes heat one of them e.g. by holding it in your hand. Refresh the temperature readings by pressing the button with two arrows. Select from the list the probe you want to assign to the given sensor.
- The "Temperature value shift" option allows you to correct the probe reading by a constant value. The adjustment can be made by moving the slider, using the "plus" and "minus" buttons, or entering a numeric value by clicking the pencil icon.

5

MEASUREMENT DATA

- The main screen of the controller shows the current reading of temperature, below there are indicators of the trend of changes.
- Historical measurement data are available by clicking on the diagram icon in the upper right corner of the screen. Measurement data are stored only on the BleBox server and are available only when the "Remote access" option is set to "Yes".
- Historical measurement data can be exported for further processing, comparison, and archiving in external systems and analytical tools. To do this, click the "three dots" icon in the upper right corner of the screen and then select the "Export" option. You can choose between the ".csv" and ".xlsx" (Excel) formats.

6

ACTIONS / TEMPERATURE REGULATOR

- The controller allows you to send control commands to other BleBox controllers via the WiFi network through the API. Each action will be deployed on particular trigger, eg. like temperature lower than, which allows you to build, for example, a temperature control system.

- When adding an action, in the "When" tab, select e.g. "Temperature lower than" or "Temperature higher than" as the "Trigger type". In the "Sensor" field, indicate the probe responsible for triggering the action, and finally fill in the "Temperature °C" field.
- In the "Execute" tab select "Control other device" as "Result", confirm. Click on the "Select device" icon. The device will search the network for compatible devices and display them in a list. Choose the device you want to control. If the device is not listed you must use the general API control method described below or update the firmware in target device. Caution! All controllers must be in the same local network, and the "wireless client isolation" option in the AP/router must be disabled.
- Then in the "Call API" field enter the API command that the driver will call.
- The most popular API control commands /s/ for switchBox and shutterBox are presented below:

Switching on the radiator via switchBox: 1

Switching off the radiator via switchBox: 0

Opening the roof window via shutterBox: u

Closing the roof window via shutterBox: d

- By default, the action will be triggered once, when the trigger condition is met. It is also possible to repeatedly call a given action by selecting one of the repeat options and setting the interval.
- If the device was not on the found list or you want to control another device in the network, select "Call URL" as "Action type".
- In the "URL" field, enter the API command preceded by the http protocol prefix and the IP address of the controller you want to operate. The IP address can be found in the settings of the given device. Caution! All controllers must be in the same local network, and the "wireless client isolation" option in the AP/router must be disabled.
- The most popular API commands for switchBox and shutterBox are presented below. It was assumed that the IP address of the device which will be controlled is: 192.168.1.123

Switching on the radiator via switchBox: <http://192.168.1.123/s/1>

Switching off the radiator via switchBox: <http://192.168.1.123/s/0>

Opening the roof window via shutterBox: <http://192.168.1.123/s/u>

Closing the roof window via shutterBox: <http://192.168.1.123/s/d>



The temperature regulator requires a hysteresis configuration, it means, a certain difference between the switch on temperature and the switch off temperature. In the case of the radiator control, the switch on temperature must be lower than the switch off temperature, e.g. "Temperature lower than: 19°C, action: turn on", "Temperature higher than 21°C, action: turn off".



BleBox also offers dedicated WiFi temperature controllers, such as "thermoBox" and "saunaBox", which independently perform the hysteresis function.

- The "Send URL" action can also be used to transmit measurements to an external server. While creating the action, the "Action Symbols" button is available. It displays a list of available placeholders along with short descriptions. To add a action placeholder, click the "plus button".
- The best trigger type for this kind of use is "Cyclic" trigger. It allows sending information at various time intervals (at least every 15 seconds). Below are examples that use placeholders, also known as action symbols:
- Sending the temperature from probe number 1 to an external server:
 - http://177.120.11.5/temperature/{temp_c.0}
- Sending the temperature from probe number 2 to an external server:
 - http://177.120.11.5/temperature/{temp_c.1}
- Sending the temperature and status of probe number 1 to an external server using a "query string":
 - http://177.120.11.5/sensor1?temperature={temp_c.0}&state={s_state.0}

- In the "Summary" tab name the action, check its correctness and confirm the entry with the "Save" button.
- A detailed description of control options and integrations examples for other controllers using the local open API can be found on our website, <https://blebox.eu>, in the FAQ section. The full technical API documentation for BleBox Devices is available at: <https://technical.blebox.eu>
- The added action will be displayed on the list. By expanding its details it is possible to preview the status of its last execution.

7

NOTIFICATIONS

- The controller allows you to display a system notification on a phone with the wBox application installed on the particular trigger, e.g. "Temperature higher than".
- Notifications only work when the controller has a stable Internet access and the "Remote access" option is enabled (default setting).
- Notifications are added similarly to "Actions" - fill in the form fields and in the "Execute" tab select "Notification" as "Result". Confirm with the "Save" button.
- Additionally, it is possible to create "Custom Notifications" that allow you to define your own notification text. In custom notifications, you can use so-called placeholders (action symbols). They make it possible to display the temperature from any probe at any position within the text. The temperature is shown in degrees Celsius or Fahrenheit, depending on the selected action symbol.
- While creating a "Custom Notification" action, the "Action Symbols" button is available. It displays a list of available placeholders along with short descriptions. To add a placeholder, click the "plus" button. Below are examples of "Custom Notifications" using placeholders, also known as action symbols:
- Custom notification message containing the temperature readings from probe number 1: Living room temperature: {temp_c.0}°C
- Custom notification message containing the temperature readings from probe number 1 and probe number 2: Outdoor temperature: {temp_c.0}°C , Pool temperature: {temp_c.1}°C
- For a notification to appear on your phone, you need to allow notifications from the selected BleBox device. This can be done in two ways:
 1. Go to the controller settings, select the "Notifications" tab, and enable the "Action notifications" option.
 2. On the wBox app home screen, open the menu by tapping the "three lines" icon in the upper left corner, then select "Notifications." Go to the notification settings, find the controller in the device list, and from the drop-down menu next to it, select "Action notifications."

In both cases, you can also enable other types of notifications. Confirm the changes by pressing the "Save" button in the upper right corner of the screen.
- If notifications are not displayed despite their configuration check in the phone system settings (Android / iOS) whether the wBox application is authorized to display system notifications.

8

TIME AND LOCATION OF THE DEVICE

- Go to settings, to the "Time and location" section. In the "Device time" tab, select your region and location from the list, confirming the changes with the "Save" button. The device will synchronize its time with the NTP time server (if the controller is in a WiFi network with Internet access) or will download the time from the phone / tablet. Since the controller does not have a clock backup battery, the clock resets itself when the power is disconnected. Hence, it is recommended that the controller is always connected to a WiFi network with internet access so that it can automatically synchronize its clock. This is especially important in controllers that have the function of working with the schedule.
- You can specify the location of the controller using your smartphone or tablet. In the "Device location" tab click the "Set location" button. The application will ask whether to share the location - allow. The approximate coordinates of your location should appear in the "Coordinates" box. If the "Set location" button flashes red with "Error" or the "Coordinates" field has not changed the value from "Not set" to numerical data there has been a failure in retrieving the location. You should then make sure that the phone / tablet has a GPS module and that the wBox application has access rights to download the location in the phone settings. Setting the location is especially important in controllers that have the function of working with the schedule, in which the schedule is based on sunrise and sunset.

TECHNICAL SPECIFICATIONS


| | |
|---|---|
| power supply | 230V AC |
| energy consumption | < 1W |
| measurement range | from -55°C to 125°C |
| measurement resolution | ± 0.1°C |
| number of buttons | 1 |
| buttons type | tact-switch, reset function |
| status signaling | colorful backlight |
| housing type | installation module DIN-1, with 17.5mm |
| dimensions | 90 (98.8) x 17.5 x 64.5mm |
| housing | ABS / acrylic, flammability class V-0 according to UL 94 |
| probe included | none (can be purchased separately as an accessory) |
| maximum number of probes | 4 |
| supported topologies and maximum probe length | <p>Start topology: - max. 100m per probe</p> <hr/> <p>Bus/chain topology: - max. 100m + max. 25 between each probe</p> <hr/> <p>Recommended cable for probes: - 3x0.14mm², twisted pair or round telephone cable</p> |
| protection level | IP20 according to PN-EN 60529 |
| mounting method | direct mounting on a 35mm DIN rail according to PN-EN 60715 |

| | |
|----------------------------------|---|
| communication standard | μWiFi, compatible with WiFi, 802.11g |
| radio frequency | 2.4 GHz |
| transmission type | two-way, encrypted |
| API | open https://technical.blebox.eu/ |
| mode | direct connection (as Access Point), Wi-Fi connection via a standard router, connection with access from any location in the world (requires only access to the Internet) |
| encryption | WPA2-PSK and authenticated encryption with associated data (AEAD) |
| compatible devices and systems | iOS (e.g. iPhone, iPad), Android, macOS (ARM processors labeled M1 or never) |
| controller operating temperature | from -20°C to +50°C |

| TECHNICAL SPECIFICATIONS OF THE PROBES | |
|--|--|
| power supply | 3.0 - 5.5V |
| sensor type | digital |
| measurement accuracy | from -55°C to 125°C |
| measurement range | ± 0.5°C in the range from -10°C to 85°C |
| dimensions | diameter: 6mm length: 30mm thickening on the heat-shrink tubing - 6.5mm |
| housing | metal, filled with polyurethane compound. Halogen-free, self-extinguishing for thermal class B (130°C), heat-shrink tubing |
| protection level | IP68 |
| cable | LiYY 3x0.14mm ² , diameter: 3.5mm |
| available cable lengths | 1m, 2m, 5m, 10m, 15m, 30m or up to 100m on request |

Connection diagrams


1. Wiring diagram – Linear topology (daisy chain, bus):

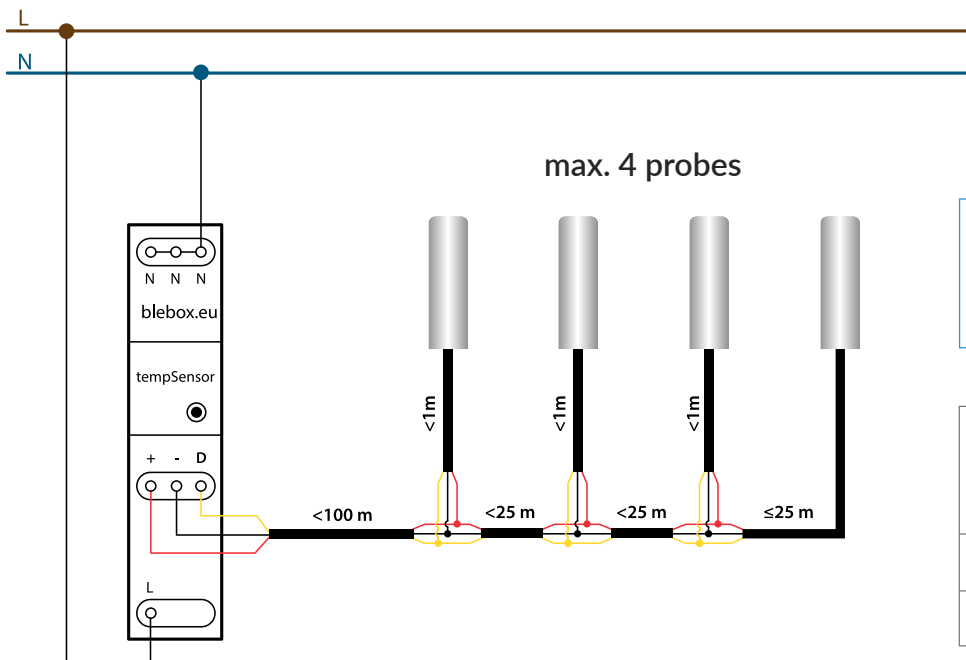

Note: The probes are not included with the controller set. "BleBox tempProbe" probes of various lengths are available for separate purchase.

| Version | Wire colors | | |
|---------|-------------|-------|--------|
| | + | - | D |
| I | red | black | yellow |
| II | brown | white | green |

2. Wiring diagram – Star topology:

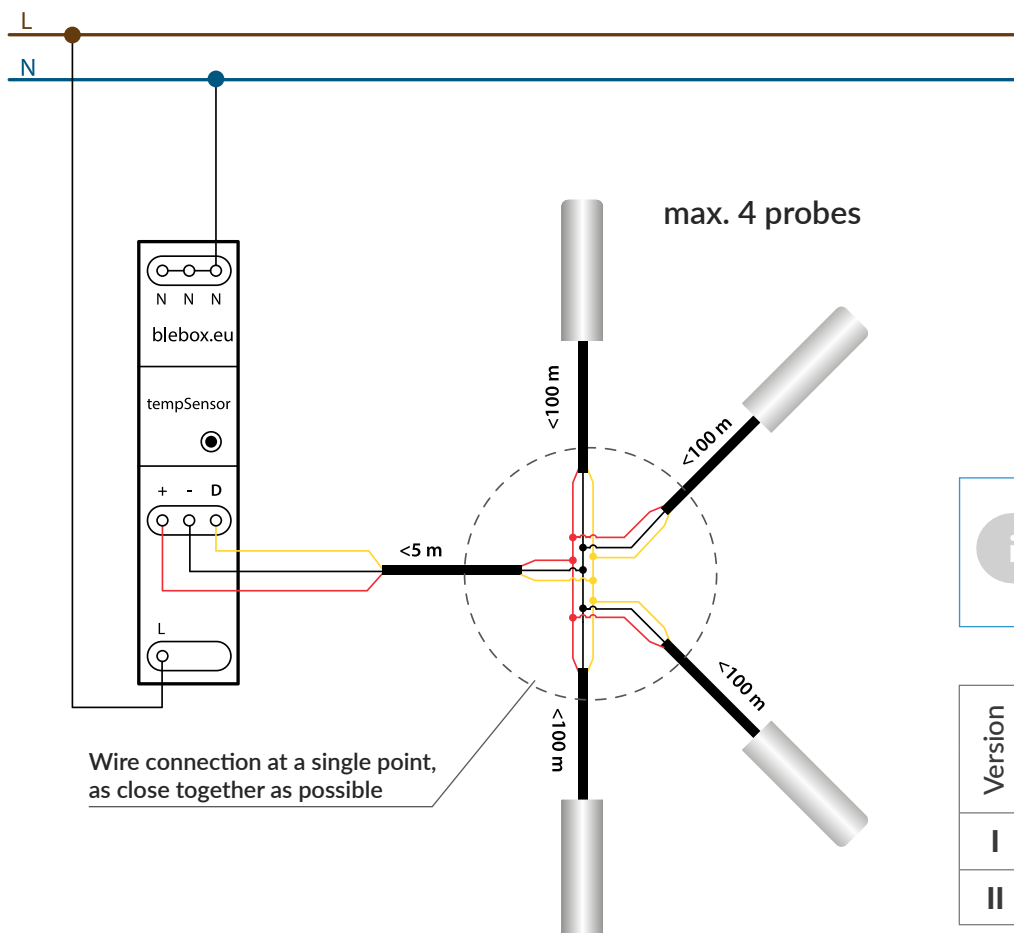

Note: The probes are not included with the controller set. "BleBox tempProbe" probes of various lengths are available for separate purchase.

| Version | Wire colors | | |
|---------|-------------|-------|--------|
| | + | - | D |
| I | red | black | yellow |
| II | brown | white | green |

ADDITIONAL INFORMATION

SOFTWARE UPDATE

To update the controller software, connect it to your home Wi-Fi network (see the "Wi-Fi Connection Settings" section) with Internet access. Then go to the settings, open the "Details, Update and Help" section, and click the "Check for update" button. If a newer version is available, the button label will change to "Download new software." After clicking it, wait about 1 minute without closing the interface or performing any other actions. The device will download the latest software and then restart. The device identifier as well as the hardware and software versions can be found in the device details.

HELP

The latest versions of the manual, additional informations and materials about products are available on our website: blebox.eu

General questions: info@blebox.eu

Service and technical support: support@blebox.eu

Before contacting our service, if it is possible, prepare the "Service key" of the given controller available in its settings, in the "Details, update and help" tab. By clicking the icon, the key will be copied to the phone's clipboard. Prepare also the "Installation key" of the wBox application, available in the main application menu, in the "Settings" tab.

Factory reset manual is available at:
<http://blebox.eu/start/reset>

The controller reconfiguration manual is available at:
<http://blebox.eu/start>

Warning: Restoring factory settings resets the controller configuration but does not unlink it from the user accounts it is assigned to. If the owner (the first user who added the device to their account) removes the controller, it is removed from all other users as well.

To remove the controller from your account in the wBox app: open the main menu, go to "Manage devices", select the controller, and click "Remove device." Alternatively, sign in to portal.blebox.eu, go to "Devices," select the controller, open "Actions" (top right), and click "Remove device." If you are not the owner, this removes the controller only from your account.

for more information visit our website

www.blebox.eu

or send us an email to: info@blebox.eu

support is available at support@blebox.eu

made in Europe



proudly made by

blebox

